


## C100- Fascia trim

### Application instructions

The C100 is a simulated lead flashing, generally fitted in conjunction with D260 angle fillet trim. C100 is usually fitted into a bed joint of the brickwork or a 25mm deep slot cut out with an angle grinder fitted with a mortar chase disc. Apply PU adhesive to the back of the trim at 300mm centres. Fit the trim into the slot and press firmly back to the wall. Apply a clear silicone sealant along the length of the C100 into the slot.

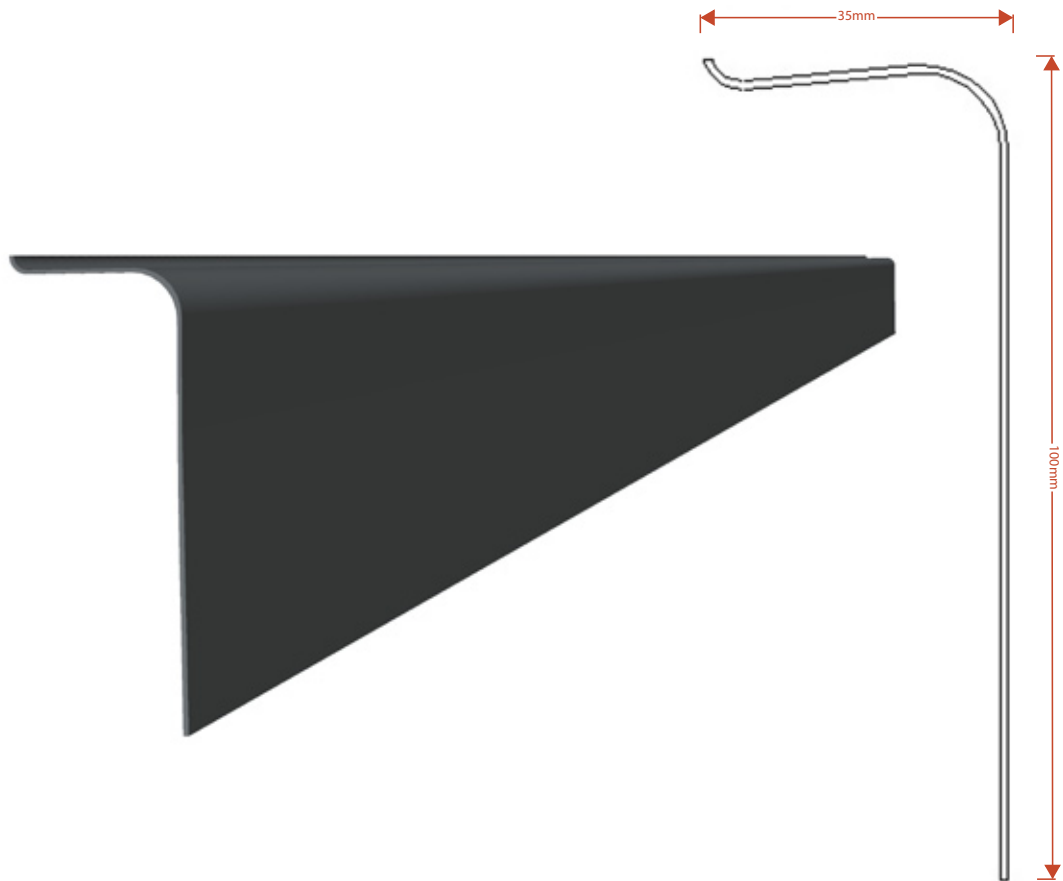

C100

### C100 typical application

