


E280- Raised ridge roll

Application instructions

E280 is used both to create expansion joints on large roofs (over 50m²) and create rolls on any ridge details. It is compatible with C6 closures (see page xx.) An adequate gap in the deck should be cut if necessary, the trim should then be nailed to each end of the decking at 300mm centres. The join over the nails should then be bandaged and the laminate should be applied over the trim. To bond these trims together, or to cap with C6 closures, apply a thin strip of PU adhesive to the inside edge of the overlapping trim and rub into place.

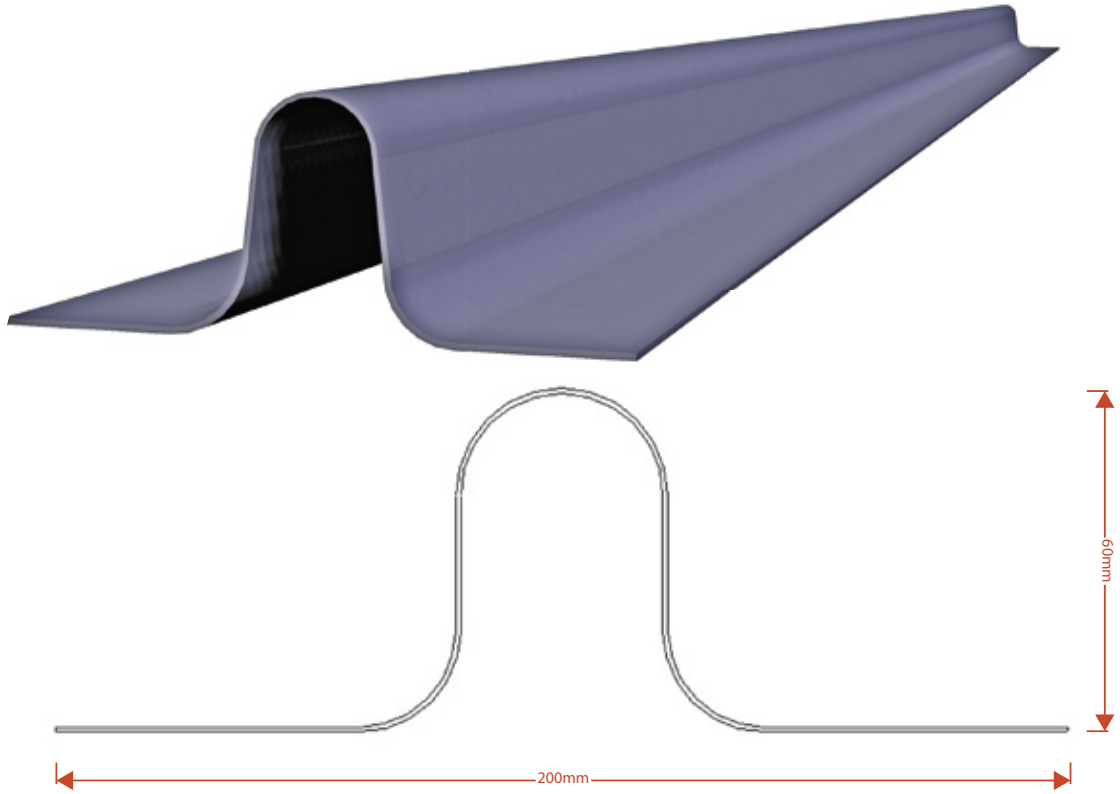

E280

E280 typical application

