


## A170- Fascia trim

### Application instructions

The A170 (or Mini A) is designed for applications where it is not possible to use the larger A200. It is also designed to fit the profile of the B230 when used on an adjoining edge. The A170 is a drip trim, fitted to the lowest edge of the roof usually where the rainwater flows into the gutter. The batten for the A170 should be doubled up to provide a stand off for the gutter to fit behind the trim, with the outer batten 10mm lower than the inner batten to allow for the radius of the trim. Apply trim adhesive to the batten in 30mm beads at 300mm centres, rub the trim into place and nail to the decking. DO NOT NAIL THROUGH THE FRONT OF THE TRIM. Where the trims are overlapped, they should be bonded together with a thin strip of PU adhesive on the inside of the overlapping trim. If the pitch of the roof is only minimal, rainwater is likely to hold behind the trim. Use a planning machine to take 2mm off the deck to allow the trim to lay flush with the board.

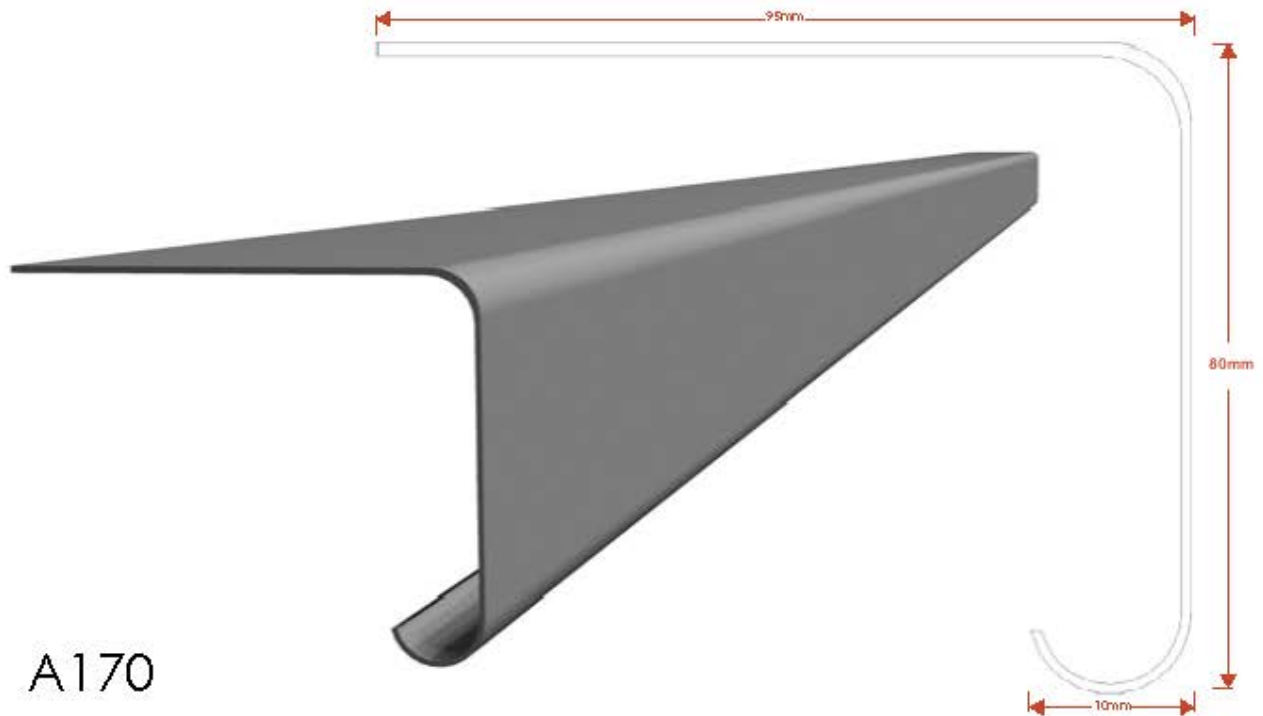

### A170 typical application

