


E35- Simulated Rolled Lead Joint

Application instructions

Used to simulate the appearance of raised rolled lead joints, also provides expansion. The trim should be nailed to the deck at 300mm centres. The joints and nail penetrations should be bandaged before the laminate is laid over the top of the trim. Ensure that the laminate is well consolidated over the top of the trim.

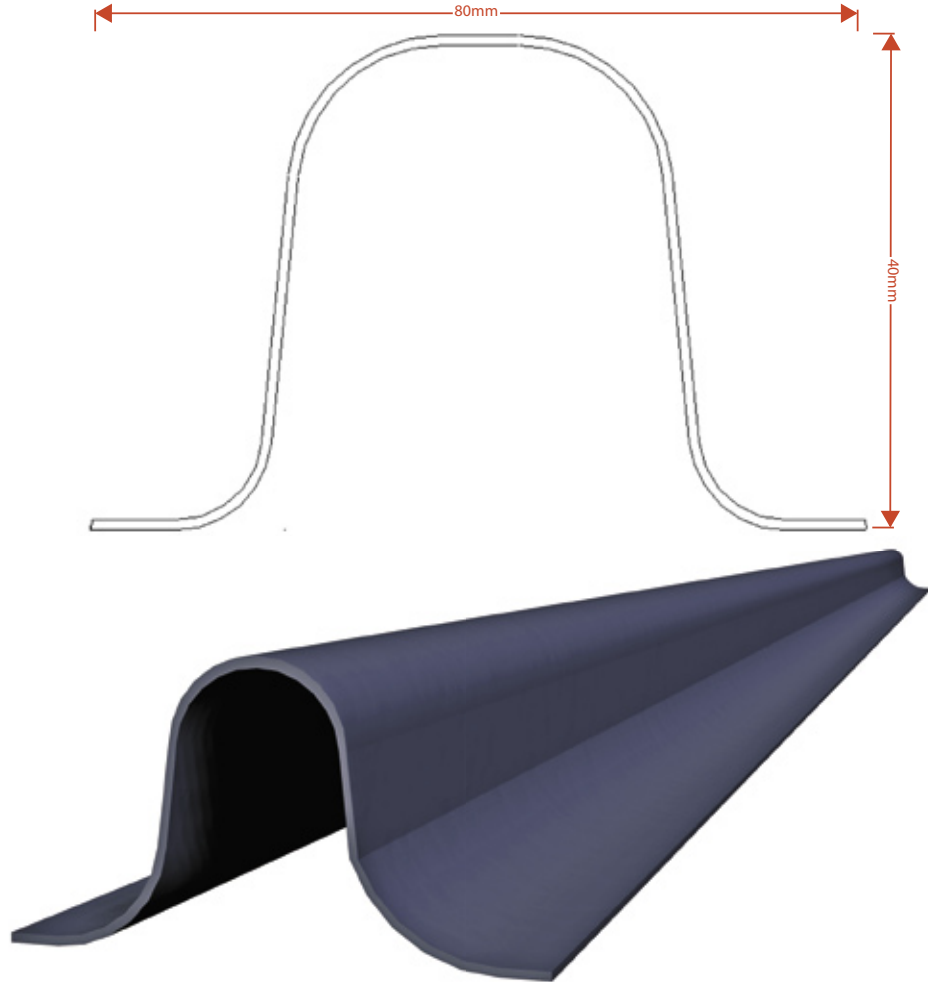

E35

E35 typical application

